

### Tool list 工具参考

The installation tools are not provided with the AC. Prepare them yourself.  
设备不随机提供安装工具，请用户根据实际安装需求自己准备安装工具。



Phillips screwdriver  
十字螺丝刀



Needle-nose pliers  
尖嘴钳




Wire-stripping pliers  
剥线钳



ESD wrist strap  
防静电腕带




Heat gun  
热风枪

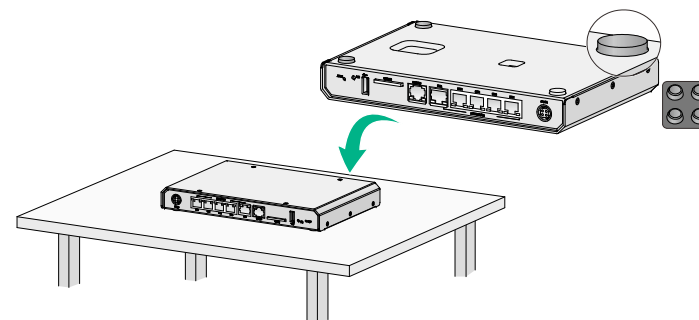

### Connecting the grounding cable 连接保护地线


Correctly connecting the grounding cable is crucial to lightning protection and EMI protection. Attach the ring terminal supplied with the AC to a grounding cable and make sure the grounding cable is reliably grounded.  
设备地线的正确连接是设备防雷、防干扰的重要保障。请使用随设备提供的接地端子制作保护地线，并正确接地。

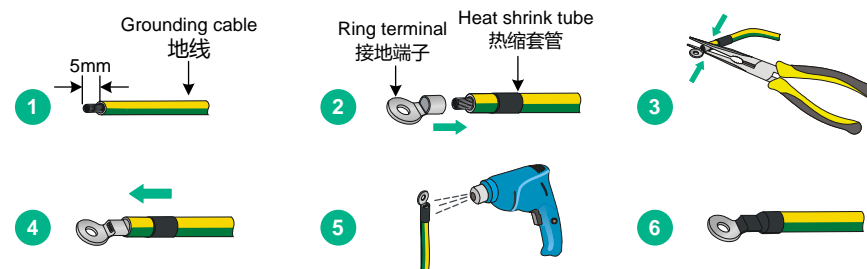

### Installation accessories 安装附件介绍




Ring terminal  
接地端子

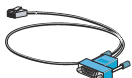

Console cable  
配置电缆



Rubber feet  
脚垫贴

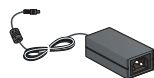

Power adapter  
电源适配器




Power cord  
电源线

Wear an ESD wrist strap, and make sure the strap has good skin contact and is reliably grounded.  
操作者需佩戴防静电腕带，确保防静电腕带与皮肤良好接触，并确认防静电腕带已经良好接地。

### Mounting the AC on a workbench 安装设备到工作台


Attach the rubber feet to the round holes in the chassis bottom. Place the AC with the upside up on the workbench.

将脚垫贴粘到设备底部的四个角上。将设备水平放置到桌面上。

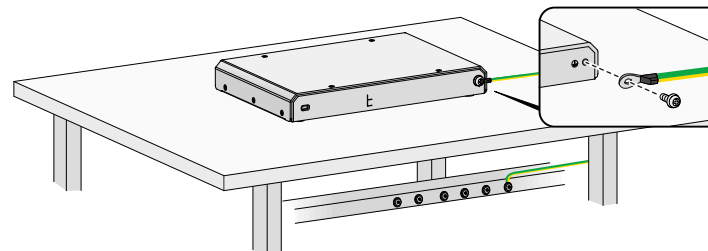

## Connecting the AC to the network 连接设备到网络

1. Before you connect power to the AC, make sure the AC is reliably grounded.  
在连接AC的电源线前，请确保设备已正确接地。
2. Connect one end of the power adapter provided with the AC to the power port on the AC and the other end to the local power source.  
请将AC随机附带的电源适配器连接到AC的电源接口，同时将电源适配器的另一端连接到本地电源。
3. Connect power to the APs. You can provide power to the APs through the AC or the local power source.  
请将AP连接电源，可以使用AC供电或者AP本地电源供电。
4. Connect the WAN port on the AC to the uplink network. Connect a LAN port to the APs through the switch. You can also connect a LAN port directly to an AP.  
请将AC的WAN口连接上行网络，连接Internet的方式取决于用户使用的运营商（用户可以通过ADSL Modem或者EPON使用PPPoE拨号方式、配置静态IP方式或者动态DHCP分配IP地址方式接入Internet）。AC的LAN口可以直接连接AP或者通过交换机连接AP，本例只给出了直接连接AP的示意图。

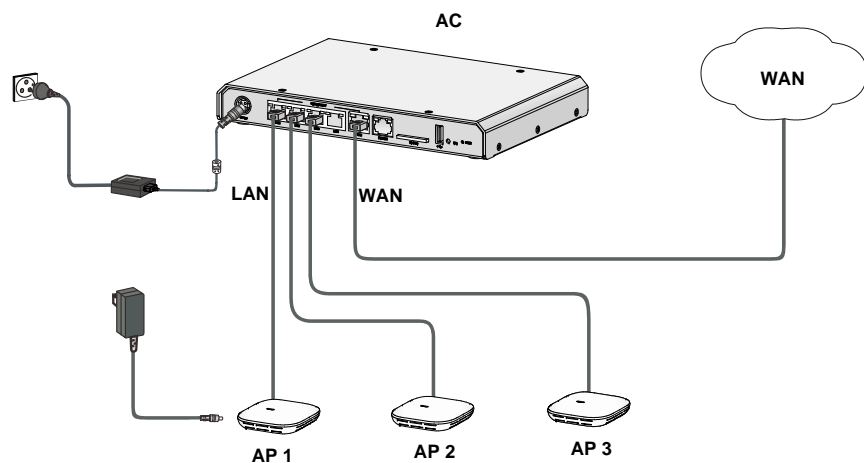

## Logging in through Telnet or web 通过Telnet或者Web方式登录设备

By default, the Telnet and web functions are enabled. You can use the following default settings to log in to the web interface:

Username—admin

Password—admin

Management IP address of VLAN-interface 1 of the AP—192.168.0.100, with the subnet mask 255.255.255.0.

缺省情况下，Telnet和Web功能已开启，并且设置了登录信息，用户可以直接使用以下信息登录设备：

用户名：admin

密码：admin

设备Vlan-interface1接口的管理IP地址：192.168.0.100，子网掩码255.255.255.0。